


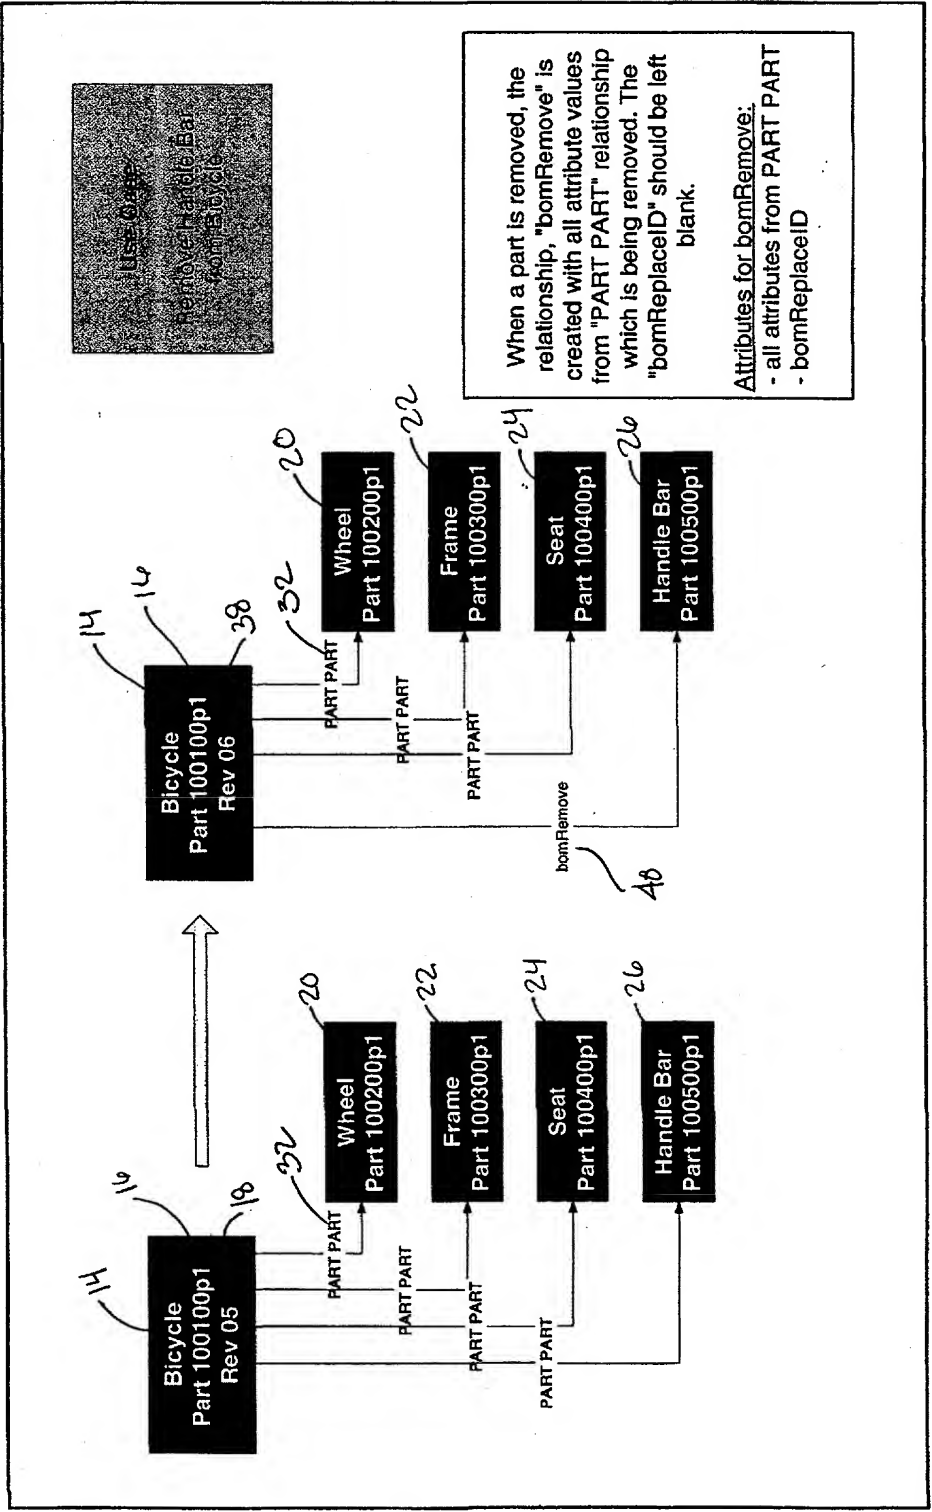


When a part is removed, the relationship, "bomRemove" is created with all attribute values from "PART PART" relationship which is being removed. The "bomReplaceID" should be left blank.

**eEngineer** 10  
Figure 2. BOM Change Management Schema - Remove



Small text at the top of the page, likely a header or page number.


**eEngineer** 10  
Figure 3. BOM Change Management Schema - Replace

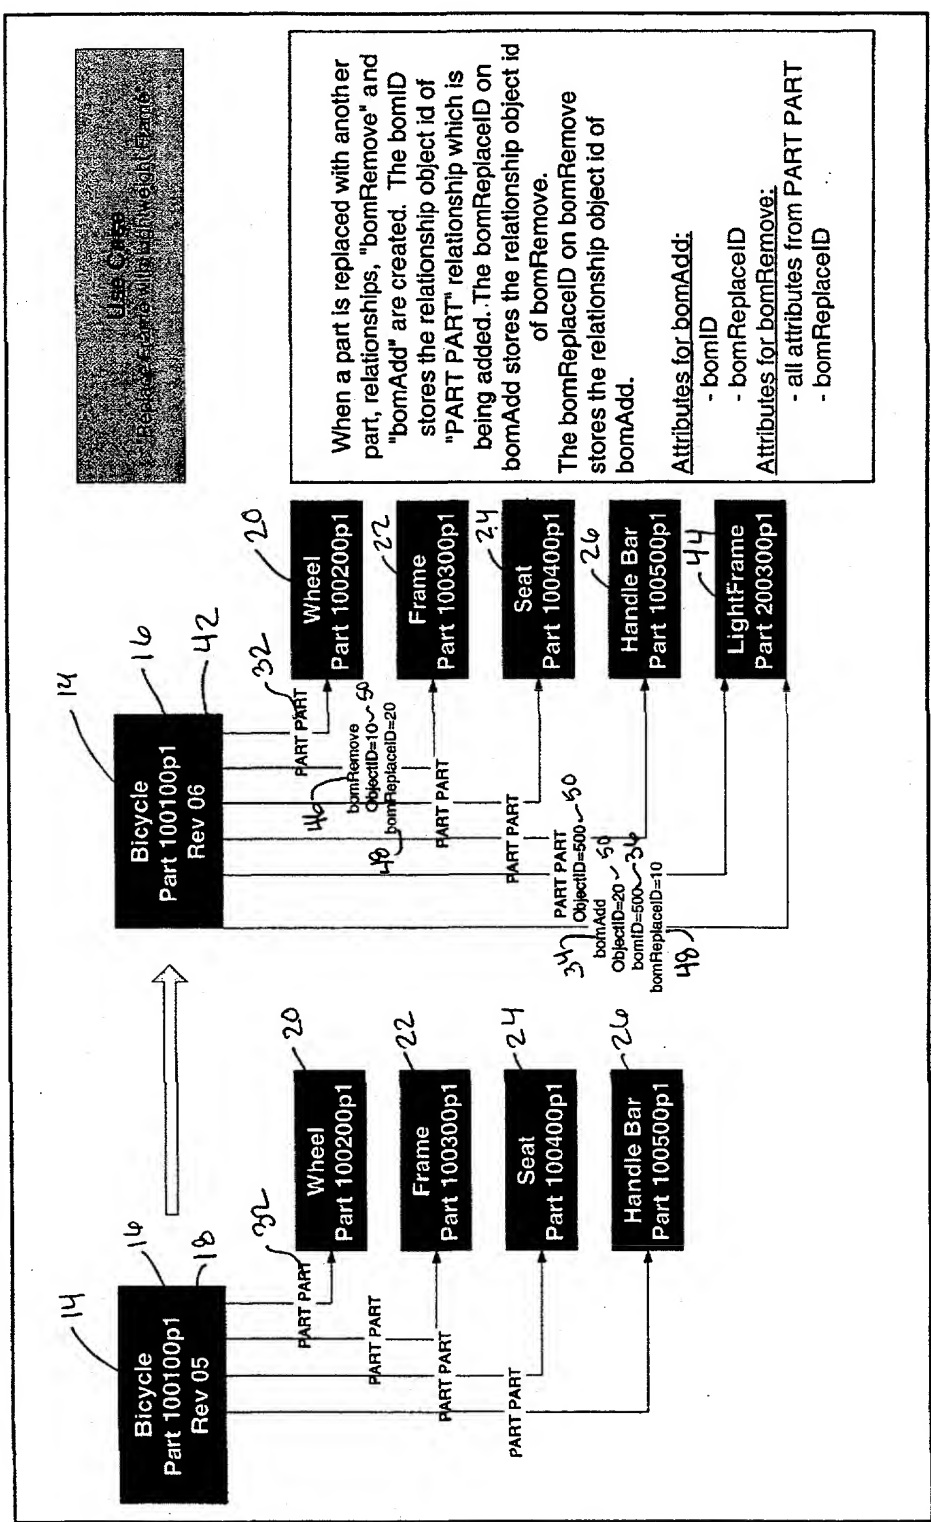

Copyright 2000 by Bentley Systems, Incorporated. All rights reserved. Bentley and the "B" logo are registered trademarks of Bentley Systems, Incorporated or Bentley Software, Inc. Other brands and product names are trademarks of their respective owners.

<sup>12</sup>  
**eEngineer**

<sup>10</sup>  
**Figure 4. BOM Change Management Schema - Change Property Only:**  
(Quantity, Sequence Number, Feature&Option Code, and/or Feature&Option Number)

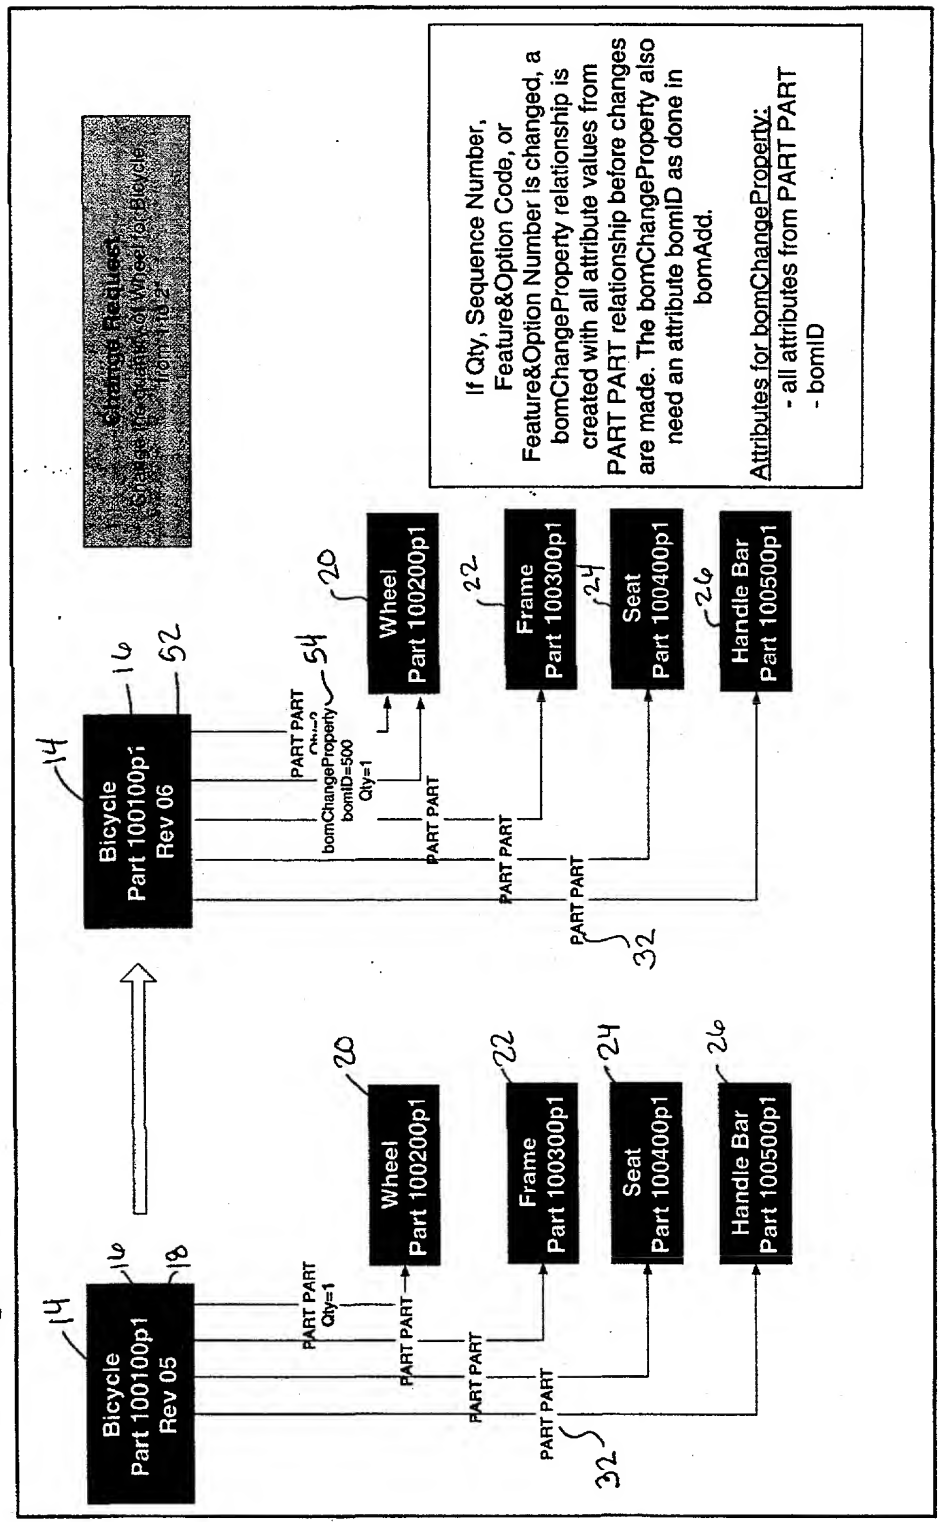

Removed (From)							Added (To)						
Type	Name	Rev.	Seq#	Qty	FO	FO#	Type	Name	Rev.	Seq#	Qty	FO	FO#
Part	Test1	02	0003	2			Part	Test5	05	0001	1		
Part	Test2	01	0002	5			Part	Test3	03	0002	5		
Part	Test9	01	0001	5			Part	Test9	01	0001	7		

80

FIG. 5

# BOM Schema

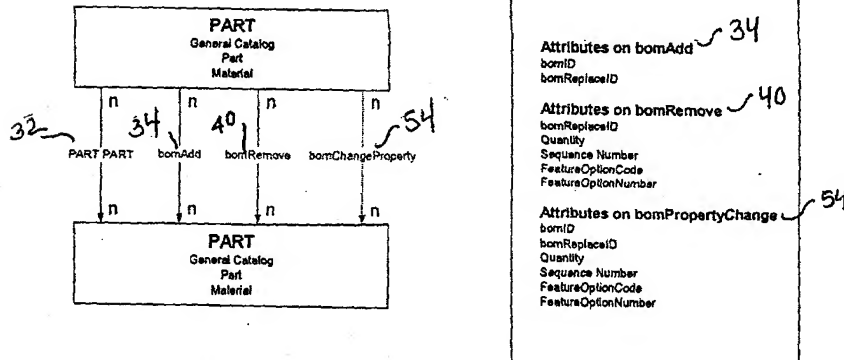


FIG. 6

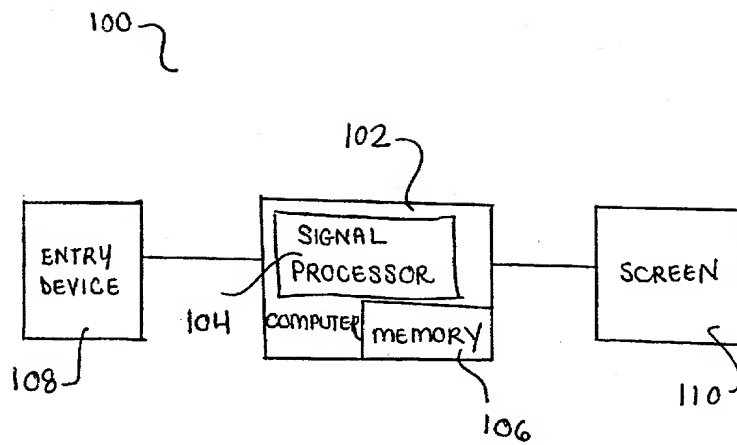


FIG. 7